

 
Logitech Keyboard & Wireless Optical Mouse

If the mouse stops working, it is more than likely the batteries have failed. Simply remove the cover from the bottom of the mouse and replace the batteries with two new AA batteries.


Once you have replaced the batteries check that the mouse is lighting up. If the mouse does not light up check the status of the batteries and that they are in the correct way round.

WHEN YOU REPLACE THE BATTERIES, THE MOUSE LOSES ITS CONNECTION TO THE KEYBOARD.

To re-establish the connection between the mouse and the keyboard please go through the following steps:

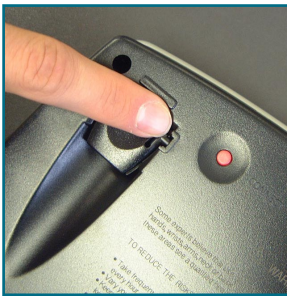

- 1) On the **underside of the Keyboard** is a **Red Connect Button**. Press This. This will send out a signal and try to connect with a remote Mouse.

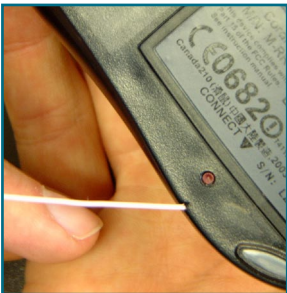


- 2) Then Press the **Red Connect Button** on the underside of **the mouse** (you may wish to use something with a point for this, such as pen). This should reconnect the Mouse & the Keyboard.

IF YOU STILL HAVE PROBLEMS CHECK THE CONNECTION ON THE COMPUTER.

Logitech / Creative Wireless Keyboard & Mouse

If you are experiencing problems with your keyboard and mouse, it is more than likely the batteries have failed. Simply remove the cover from the bottom of the mouse and/or Keyboard and replace the batteries with new AA Batteries.

Once you have replaced the batteries **you will need to re-establish the wireless connection between the receiver**, the keyboard and the mouse.

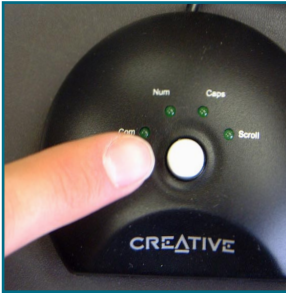

To re-establish the connection please go through the following steps in order:

- 1) On the receiver, press the connect button on the Top.



- 2) Then press the connect button on the underside of the keyboard.



- 3) Then press the button on the underside of the mouse. This should reconnect the mouse & the keyboard to your computer.

IF YOU STILL HAVE PROBLEMS CHECK THE CONNECTION ON THE COMPUTER.